



1 Accessing the various modes

- Press "B" to access the modes:
Time → Date → Alarm → 2nd Time zone → Stopwatch.

2 Setting the time: From the "Time" mode → 1

- 1 To access the time settings ▶ Press "C" for 2 seconds
 - 2 Then adjust the time settings ▶ Press "D" then press "C" to confirm.
- Adjust successively: **Second** → **Hour** → **Minute** → **12H or 24H format**.

3 Setting the date: From the "Date" mode → 1

- 1 To access the date settings ▶ Press "C" for 2 seconds
 - 2 Then adjust the date settings ▶ Press "D" then press "C" to confirm.
- Adjust successively: **Year** → **Month** → **Day**.

4 Setting the alarm: From the "Alarm" mode → 1

- 1 To access the alarm settings ▶ Press "C" for 2 seconds
 - 2 Then adjust the alarm settings ▶ Press "D" then press "C" to confirm.
- Adjust successively: **Hour** → **Minute** → **Sound**.

5 Setting the time zone (T2): From the "2nd Time zone" mode → 1

- 1 To access the time zone settings ▶ Press "C" for 2 seconds
 - 2 Then adjust the time zone settings ▶ Press "D" then press "C" to confirm.
- Adjust successively: **Hour** → **Minute** → **12H or 24H format**.

6 Using the stopwatch

- Go to "Stopwatch" mode by pressing "B".
- Start the stopwatch ▶ Press "D"
- Pause ▶ Press "D"
- Reset to "0" (Reset) ▶ Press "C"

7 Backlight

- Turn backlight on ▶ Press "A"

8 Setting the time manually

- 1 Pull the crown "E" / 2 Set the time / 3 Push the crown "E" back in



To change the battery: contact the retail outlet where you bought your product. If you change it yourself, you risk damaging the seal and impairing the waterproof design as well as voiding your warranty. Battery life is influenced by the length of time it is stored in the shop and the way in which you use the product.



The "crossed-out bin" symbol means that this product and the batteries it contains must not be thrown away with general household waste. They are subject to a specific type of sorting. Please take the batteries and your unusable electronic product to an authorised collection point for recycling. This treatment of your electronic waste will protect the environment and your health. Dispose of your batteries in a place where they will be recycled.

The product has a 2 years guarantee for normal usage.

The guarantee does not cover:

- damage resulting from misuse, from a failure to respect the precautions for use, from accidents, from improper maintenance or from commercial use of the product.
- damage resulting from repairs carried out by persons not authorised by OXYLANE.
- batteries and casings which are cracked or broken or which show signs of impacts.



GEONAUTÉ.COM

oxylane

OXYLANE

4 Boulevard de Mons – BP 299

59665 Villeneuve d'Ascq cedex – France

